



QR: Use your camera or bar code scanner and download the digital PDF version



Operating manual

Drip Torch 1 liter



- Warnings *Page 1*

- Operating instructions and mixture preparation *Page 2*

- Use mode, suggestions, disassembly and maintenance. *Page 3*



INFOREST

WWW.INFOREST.COM.AR
ventas@inforest.com.ar
comex@inforest.com.ar

[inforest_incendiosforestales](#)
[inforest.cba](#)

Brasil 1238 Alta Gracia
 Córdoba - Argentina CP: 5186
 Tel/Fax: +54(0)3547430529



SUGGESTIONS

 
To keep the flame in self-combustion, adjust the proportions of the fuel mixture.

DISASSEMBLY

Repeat steps 4 - 3 - 2 - 1 in reverse order.


MAINTENANCE

- Do not leave fuel residues in the container.
- Always check all parts of the product.
- Replace the wick if necessary.
- In case of loss or damage to the part, purchase original spare parts.

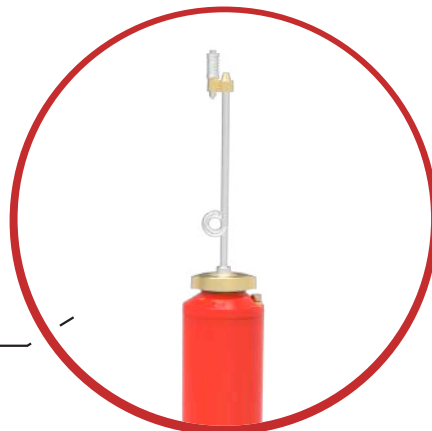

USE MODE

 1 To embed the wick with fuel, do up and down movements.

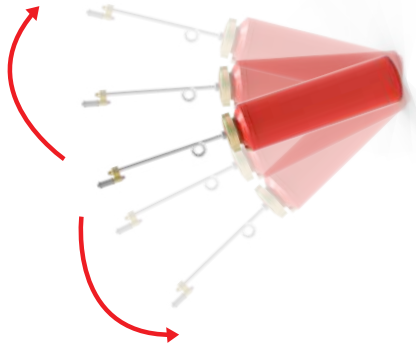

2 Light the wick.

3 Once the wick is lit: Tilt the torch forward gradually until the fuel drips on the burning wick and generates a flame that will fall on the ground to be burnt.



IMPORTANT:
 The appropriate operating position is with the aerator positioned upwards.

INFOREST Drip Torch

Please read the following instructions carefully and thoroughly before using it in order to have a satisfactory experience.

ATTENTION

- Before using it, inspect all parts of the product to ensure its functions properly.
- Check inside the container and verify that the vent tube is in place.
- Check the o-ring of the cap.
- Check the condition of the spout-wick assembly.

IMPORTANT

- Ignition equipment should only be used by trained and experienced personnel. All precautions must be taken to avoid danger to you and others.
- You should always identify and plan an escape route before starting the burn, since the rapid spread of fire can be dangerous to you or others, including extinguishing equipment that may be at a considerable distance from you.
- The product uses petroleum-based fuels that must be handled with caution.

I OPERATING INSTRUCTIONS

CARRYING POSITION



1 ASSEMBLY FOR OPERATING USE

Unscrew the brass screw and place it to a side.



2 Take the cap/spout/wick assembly of the container and remove it.



3 Release the fuel passage by unscrewing the plug.



 
Then screw the plug into the housing parallel to the passage, to prevent

4 Check that the ball, screw and filter are in place inside the cap.

2

I MIXTURE PREPARATION

5 Take the container and prepare the mixture according to suggested proportions.

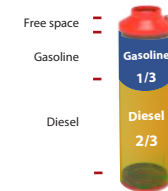


6 ATTENTION! Check the o-ring of the filling mouth.



Take the cap/spout/wick assembly and place it on the mouth of the container.

7 Align the assembly so that the loop is opposite to the aerator.

 8 Take the screw and tighten it to be able to use the product.

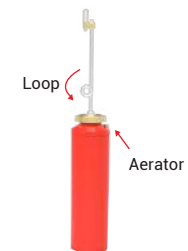

9 Aeration: Unscrew the aeration screw counterclockwise (at least two full turns).



1